

# ROVER RANGE

## INSTRUCTION OF USE

To adjust back height hold back with two hands while seated and raise to desired height

To lower the back height raise back all the way to the top and release slowly

**RIGHT FOURTH LEVER**  
To adjust back angle

**RIGHT THIRD LEVER**  
To adjust seat angle

**RIGHT SECOND LEVER**  
To adjust seat height

**RIGHT FRONT LEVER**  
To adjust seat front angle

**700MM BLACK NYLON  
5 STAR BASE WITH CASTORS**

Use soft tyred castors for tiles

Use hard tyred castors for carpet



**INDOOR USE ONLY**

**ADJUSTABLE ARMS**

**FRONT KNOB**

To adjust weight tension

**X Do not use as a step ladder**

## DIMENSIONS: (mm)

LOW BACK	BACK TO FLOOR	HIGH BACK	BACK TO FLOOR	SEAT	SEAT TO FLOOR	ARM TO FLOOR
W: 510	Lowest: 980	W: 500	Lowest: 1095	W: 510	Lowest: 480	Lowest: 640
H: 540	Highest: 1140	H: 630	Highest: 1260	D: 520	Highest: 570	Highest: 790

Fabric: Jazz black



ROVER-2HA



ROVER-2LA



back view

### Features:

Adjustable seat height  
Adjustable back height (ratchet)  
Adjustable seat and back angle  
Adjustable weight tension

Adjustable arms  
Moulded seat and back foam  
4 lever ergonomic mechanism

700mm black nylon 5 star base  
Available in local fabrics  
Suitable for indoor use only

